

## EPROM INSTALLATION INSTRUCTIONS

Remove the 4 screws that attach the faceplate to the control box. Carefully raise the front edge of the faceplate exposing the PC board. Unplug the ribbon cable connecting the faceplate to the PC board. The EPROM is the 28 pin IC (U9) in the middle of the PC board. The EPROM should have a sticker covering the window that says something like MS514 or NEWMS514. With a flat head screwdriver, carefully pry up one end of the chip and then the other end until the chip is free from the socket (try not to bend any legs). To install the new EPROM, have the notch on the chip facing to the right and plug it in to the socket. Make sure all the legs are properly aligned with the socket to keep from bending any legs. Push the chip all the way down until fully seated in the socket. If you have any questions or need technical assistance, please feel free to call the scoreboard service department @ 800-392-5050.

THANK YOU!