



MULTISPORT 250 Operating Instructions For Baseball

Your scoreboard model may not have all of the features listed below.
The Multisport 250 Controller is designed to operate three different models.

SETUP

When the *MULTISPORT250* controller is plugged in, the control box will display the information from the previous game or the last information that was on the scoreboard when the controller was unplugged.

It will be necessary to “clear” the scoreboard and reset it for the new game. To do this, press “#” key, then “3”, and then press “FUNCTION”.

On the face of the controller, a red LED will light indicating there is power to the controller. A green LED will light when the clock is running.

Standard Baseball System scoring keys:

- You must first press this key, then press a single digit each time you enter numbers from this keypad. (Refer to HOME score example sequence.)

FUNCTION - This key is used to change from one sport to another by pressing the “#” key, the sport number (Football is ‘1’, Basketball is ‘2’, Baseball is ‘3’). Then press “FUNCTION”. The MS250 controller is preset to your model scoreboard. If you have other compatible SPECTRUM scoreboards and you want to use this controller, enter the sport number as discussed.

HOME – Pressing this switch will advance the visitor score digits by one. To reset the score to “0”, press “RESET”, and then “HOME”. To enter a number, e.g., “12”, press “#”, then “1”, then “#”, then “2”, and then press “HOME”.

VIS – Pressing this switch will advance the visitor score digits by one. To reset the score to “0”, press “RESET”, then “VIS”. To enter a number, e.g., “12”, press “#”, then “1”, then #, then “2”, and then press “VIS”.

INN – Pressing this switch will advance the innings digits by one. To reset the innings to “0”, press “RESET”, then “INN”. To enter a number, i.e., 12, press “#”, then “1”, then “#”, then “2”, then press “INN”.

POSS – On Baseball Scoreboards, this will alternate the **AT BAT** indicator between HOME and VISITOR or top and bottom of inning indicators on models with these features.

BALL – Pressing this switch will advance the ball indicator by one, then to blank.

STRIKE - Pressing this switch will advance the strike indicator by one, then to blank.

OUT - Pressing this switch will advance the out indicator by one, then to blank.

HIT – Pressing this switch will turn on the hit indicator; pressed again, the indicator will go off.

ERROR - Pressing this switch will turn on the error indicator; pressed again, the indicator will go off.

CLOCK SET - To enter time on the clock (for models with clocks), press the “#” key before each digit, and then press “**CLOCK SET**”. The MS250 controller allows for a down counting clock only.

CLOCK ON/OFF – Pressing this switch will turn the clock on. When the clock is on, the right top LED on the controller will light.

MANUAL HORN – Press this key to activate the horn.

AUTO HORN – When the clock reaches “0”, the horn will blow for two seconds and then turn itself off.

RESET – This key is used to reset score and inning to “0”.