



MSX/MULTISPORT 2000 Operating Instructions For Time Of Day Clock


**Your scoreboard model may not have all of the features listed below.
The MSX/Multisport2000 Controller is designed to operate many different models.**

SETUP


When the *MSX/MULTISPORT2000* controller is plugged in, the LCD screen on the control box will display the information from the previous game or the last information that was on the scoreboard when the controller was unplugged.

It will be necessary to “clear” the scoreboard and reset it for the new game. To do this, press “FUNCTION” then “1” then “ENTER”.

The LCD screen will display something similar to below depending on your “defaults”. This screen is referred to as the “scoring screen”. It is a small version of the scoreboard.

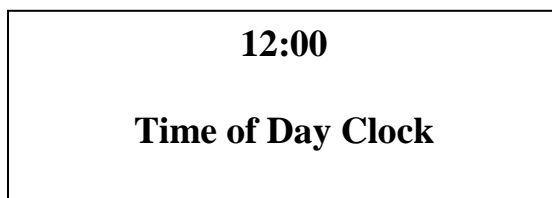

The *MSX/MULTISPORT2000* controller is preprogrammed from the factory to a standard default. This is the MAIN MENU screen. **With the clock off, pressing FUNCTION will always return you to this menu.**

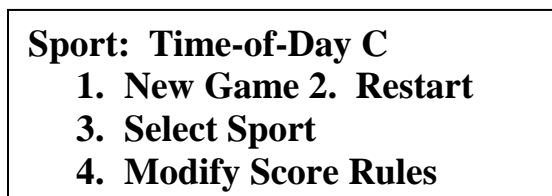

Quick Operations Menu

Press **FUNCTION** then.....

Select “1”, and press “ENTER” to begin a new game.

Select “2”, and press “ENTER” to restart the last game. This selection is typically used in the event of a power failure. When power is restored to the scoreboard, select “2”, and press “ENTER”. This will restart the scoreboard with the correct information before the power failure.


Select “3”, and press “ENTER” to select a different sport (i.e.: football, baseball, etc.).

Select “4”, and press “ENTER” to modify the scoring rules for a particular sport.

OPERATION

At the **Scoring Screen**, the scoreboard will be showing this information.

The LCD screen will display something similar to below depending on your “**defaults**”. **This screen is referred to as the “scoring screen”. It is a small version of the scoreboard.**

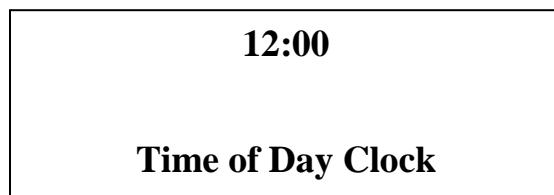

Standard Time of Day Clock System scoring keys:

Clock Set – Sets the clock to the time entered from the keypad, press ‘Clock Set’ and turn the Clock Switch on.

Clock Up/Down – Changes direction clock counts.

Reset – Will reset these back to zero or blank.

System Function Keys:

Function – enters setup mode to perform system functions (select sport, change scoring parameters, etc.) – clock must be off.

Next – go to next option/screen (in non-scoring setup mode).

Back – go to previous option/screen (in non-scoring setup mode).

Enter – select option (in non-scoring setup mode).

Restore LCD – return to scoring mode.